



Programming Instructions for RF Remote Control Transmitter(s) and Receiver

Programming instructions:

Each transmitter has its own unique internal address that is transmitted whenever a button on the transmitter is pressed. The receiver needs to be programmed to respond only to transmitters it is intended to operate with. The following steps configure the receiver to operate with a transmitter(s). Up to twelve transmitters can be programmed to one receiver. Please read the entire programming procedure before starting. Prior to programming the receiver, verify that the receiver is connected to the input power. When the receiver enters program mode, all previous transmitter addresses that were programmed will be erased from the receiver's memory. When programming the transmitter to the receiver, hold the transmitter an arms-length away from the receiver; holding the transmitter too close will overmodulate the signal and it may not program.

1. Locate the pushbutton labeled "PROGRAM" on the receiver. Press and hold this button until the red LED next to the program button illuminates (approximately 5 seconds). The receiver is now in the transmitter program mode. Release the blue button. At this point all previously programmed transmitter addresses are erased from the receiver's memory.
2. Press and release any button on the transmitter and verify that the red LED on the receiver extinguishes and then illuminates (blinks once).
3. Repeat previous step for additional transmitters that will operate with the receiver. The red LED on the receiver will extinguish and illuminate one time for the first transmitter being programmed, twice for the second, three times for the third, four times for the fourth etc. The receiver will not respond to transmitters that have already been programmed.
4. After 5-seconds of no switch being pressed on the transmitter(s) the receiver will return to normal operation. The red LED on the receiver will blink rapidly, then extinguish. The receiver is now in the normal mode of operation. This completes the programming instructions. The receiver will retain its programming even when power is removed.